




XRF Analyser

Testing at sea, offshore or on land

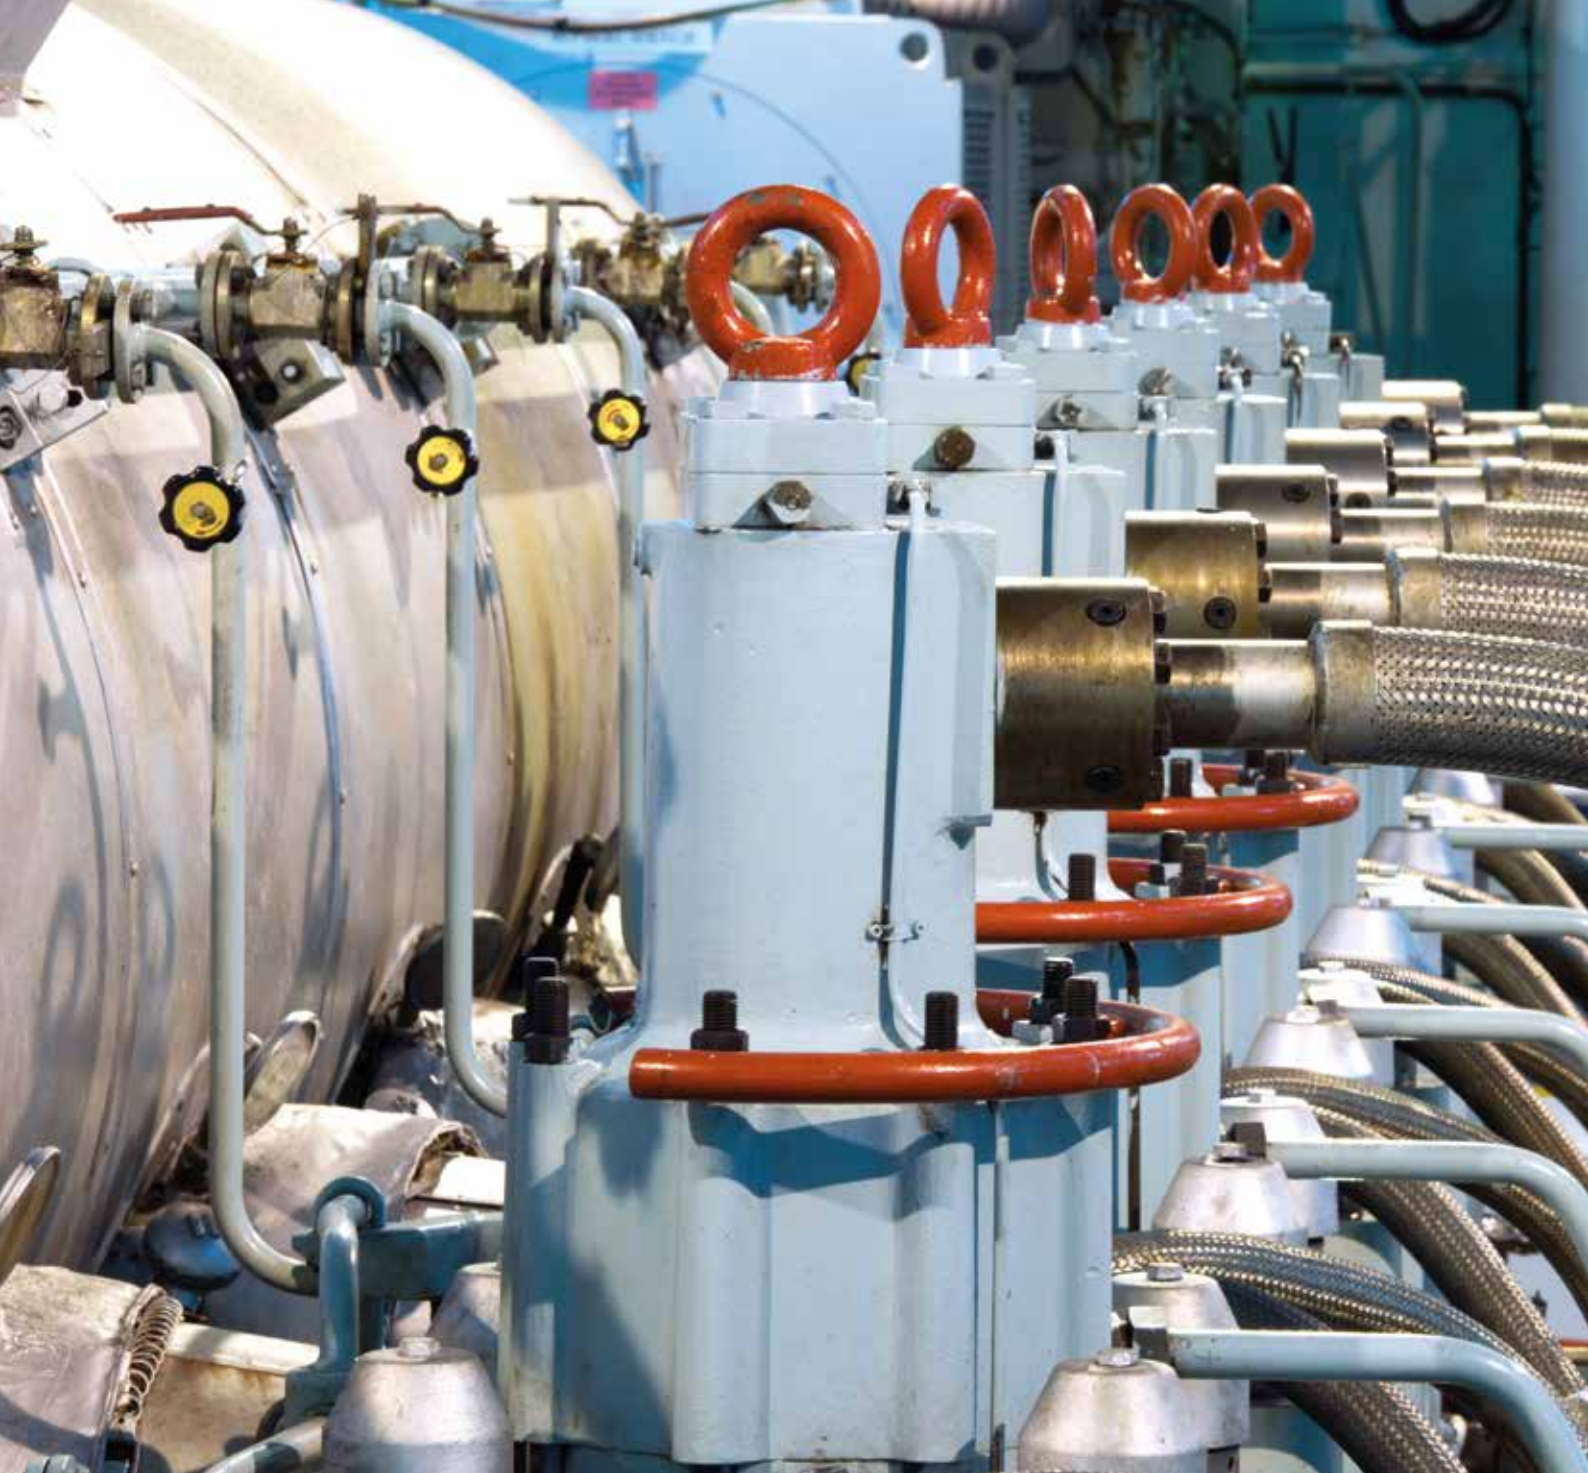

 **SIMPLEX-TURBULO**
DIRECT
www.stcdirect.com

Parker | Kittiwake

ENGINEERING YOUR SUCCESS.

Interactive Brochure

 [order at stcdirect.com](https://www.facebook.com/stcdirect)

Meeting new Sulphur limits for marine fuel oil

The ability to spot check the Sulphur content of fuel oil onboard a ship will help shipowners and operators ensure compliance with the latest IMO (MARPOL) regulations.

From January 2020 the maximum allowable Sulphur content of marine fuels is changing: for all areas outside the existing Sulphur Emission Control Areas (SECAs) the limit will be reduced from the current level of 3.50% m/m to just 0.50% m/m.

Introduced by the International Maritime Organization (IMO), the new limit is being applied worldwide and covers the fuel oils used in main and auxiliary engines as well as in boilers. Compliance with the new regulations will be monitored by Port State Control.

 order at stdirect.com





For shipowners and operators, the new limit leaves little room for error. The traditional method of Sulphur level confirmation by Bunker delivery note significantly increases the risk of non-compliance and subsequent penalties, furthermore waiting for a laboratory analysis is equally flawed as the vessel could have sailed by the time that is received and the Sulphur level found to be outside the specified limit.

With this new equipment bunkers can be sampled during delivery and non-compliance could be identified in the first few minutes of delivery (and at any other time interval) thereby preventing expensive de-bunkering and payment for non-compliant fuel.

It will be essential for each vessel to know and comply with the Sulphur limits of 0.10% m/m in SECAs or 0.50% m/m in all other areas worldwide.

On-Board testing is one of the most effective means of establishing fuel compliance with the Sulphur regulations.

Testing at sea, offshore or on land

As a lightweight, portable and self-contained X-Ray Fluorescence (XRF) spectrometer, the XRF Analyser enables in-situ lab standard testing of fuel oils at sea or on land.

The XRF Analyser can, for example, be used in the engine room or control room of a ship to test the Sulphur content of fuel oil as it is being delivered. Checking the fuel during delivery allowing ships personnel to verify that the Sulphur content shown on the bunker delivery note is correct, thus eliminating the risk of accidental non-compliance.

The XRF can be used by suppliers, brokers, surveyors and producers of bunker fuels. Faster and more accessible testing means that the XRF Analyser allows fuel oils to be tested more frequently and conveniently compared to sending samples to a laboratory. By allowing test results to be downloaded, or storing them for up to two years, the XRF Analyser also plays an important role in helping vessel operators to manage compliance audits more efficiently.





order at stdirect.com



"The XRF Analyser is factory calibrated according to ISO 8754 and makes field measurements that correlate strongly with ISO 8754 laboratory measurements."

Dr David Atkinson - Principal Chemist

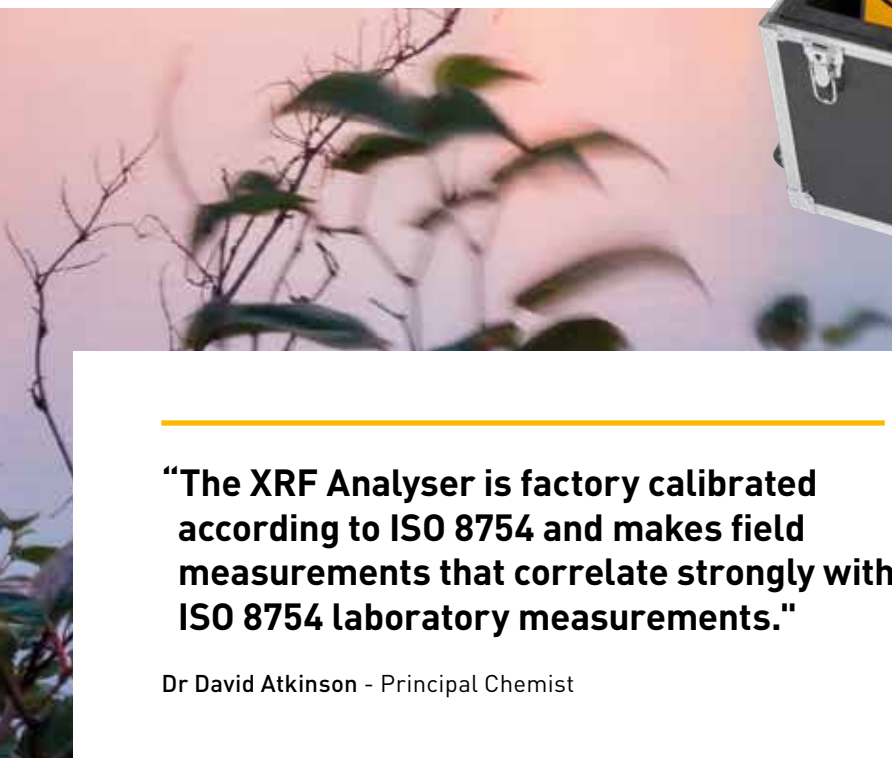

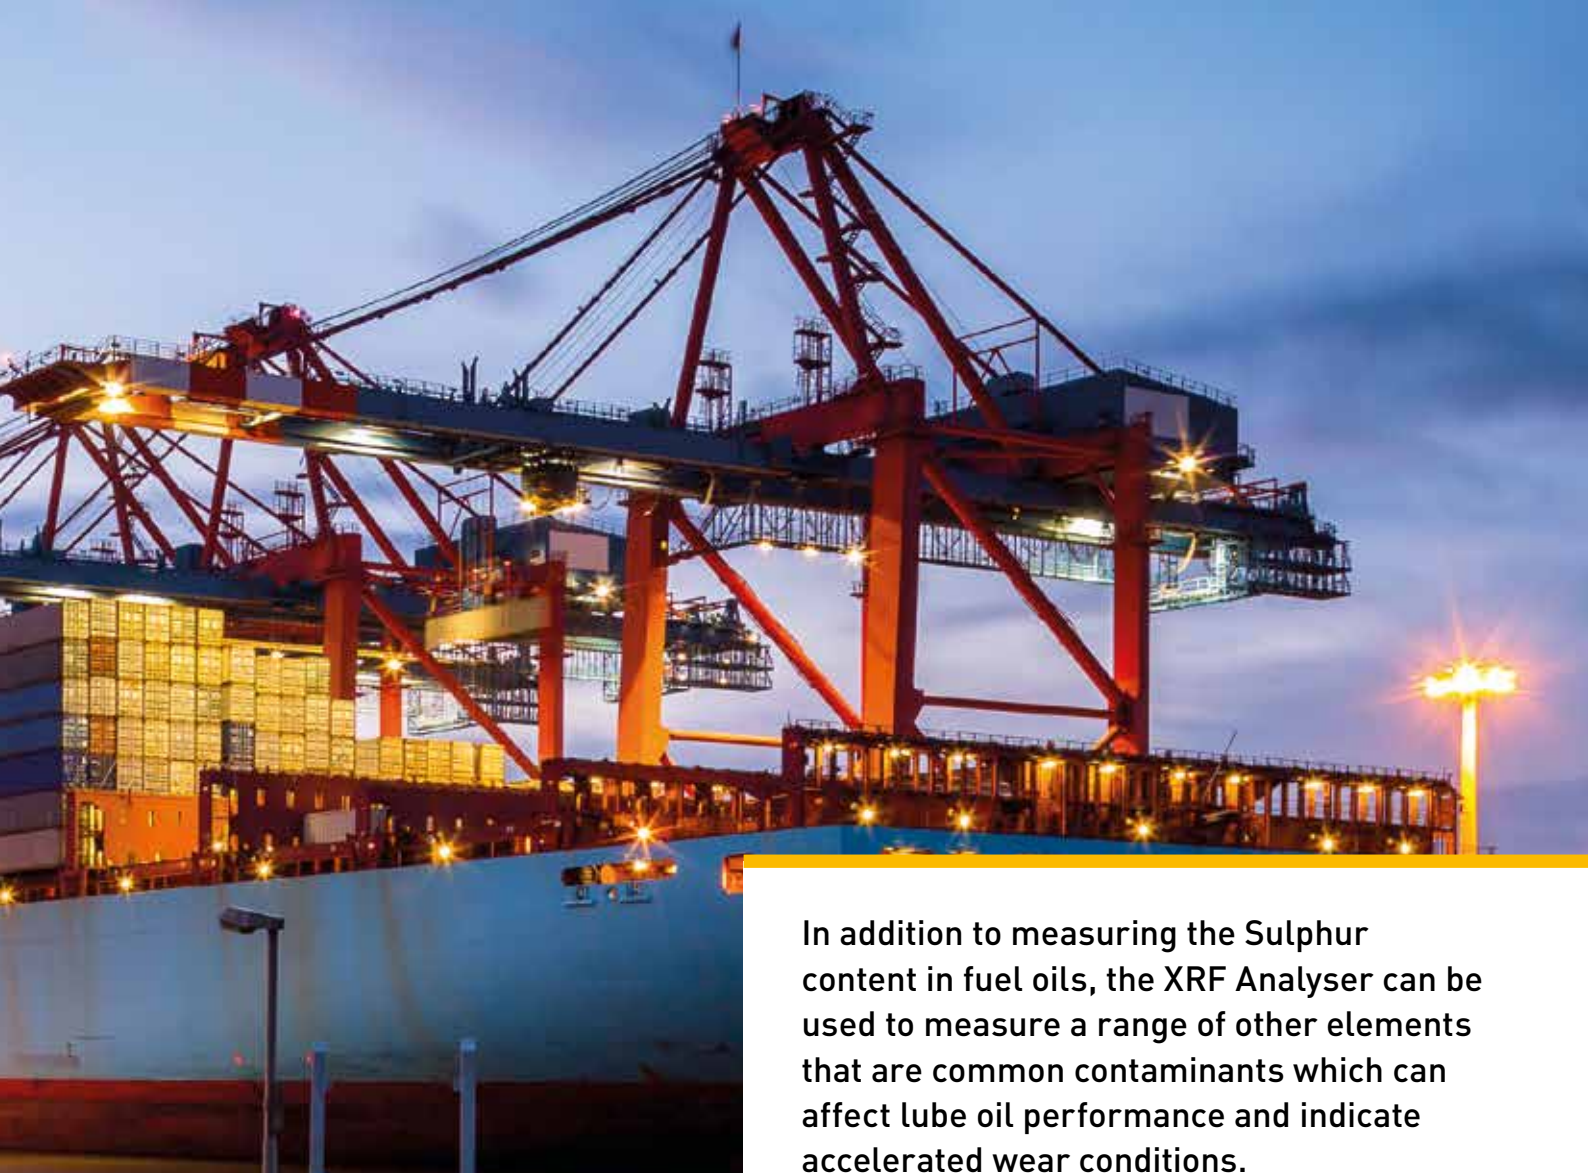

In addition to measuring the Sulphur content in fuel oils, the XRF Analyser can be used to measure a range of other elements that are common contaminants which can affect lube oil performance and indicate accelerated wear conditions.

Wear elements measured by the Parker Kittiwake XRF Analyser and their likely sources onboard a ship (if any)

Element	Likely sources onboard a ship
Chromium	Cylinder liners or pistons/piston rings, gears
Copper	Cylinder liners, pistons/piston rings, or bearings, stuffing box, gears, hydraulic systems
Iron	Cylinder liners or pistons/piston rings, gears, stern tubes, hydraulic systems
Lead	Cylinder liners, pistons/piston rings, or bearings, gears, stern tubes
Nickel	Fuel contaminant
Tin	Trunk piston and crosshead engine bearings, stuffing box, reduction gears, stern tubes, hydraulic systems
Vanadium	Fuel contaminant
Zinc	Lubricant additive
Molybdenum	Trunk piston engine cylinder liners, pistons/piston rings
Silver	Trunk piston engine bearings
Calcium	Lubricant additive
Titanium	Not applicable for marine
Manganese	Not applicable for marine
Cadmium	Not applicable for marine
Element	Source within fuel
Sulphur	Crude oil

Portable XRF Analyser

The XRF Analyser combines simplicity with accuracy. Its standalone operation means that it offers immediate plug-and-play operation.

Integrated into the small, lightweight housing is a high-resolution LCD touch-screen display which enables fast operation and delivers clear results.


The operator simply draws the sample of fuel oil from the ship's system into the sample container, places it in the XRF Analyser and presses the test button. As the sample is not damaged or altered during testing, it can be retained for any additional sample analysis.

The result of the test is displayed percentage of Sulphur in the sample. This helps to avoid ambiguity and human error by eliminating the need for the operator to interpret the test data.

Standard Product	Analysis Type
XRF6111*	Multi element 
Consumables Pack	
ACCK04001 (includes)	
Sample cup	
Dose syringes	
Test mylar	
Copper target	
Adhesive label reel for printer	

*Availability of other options on request.

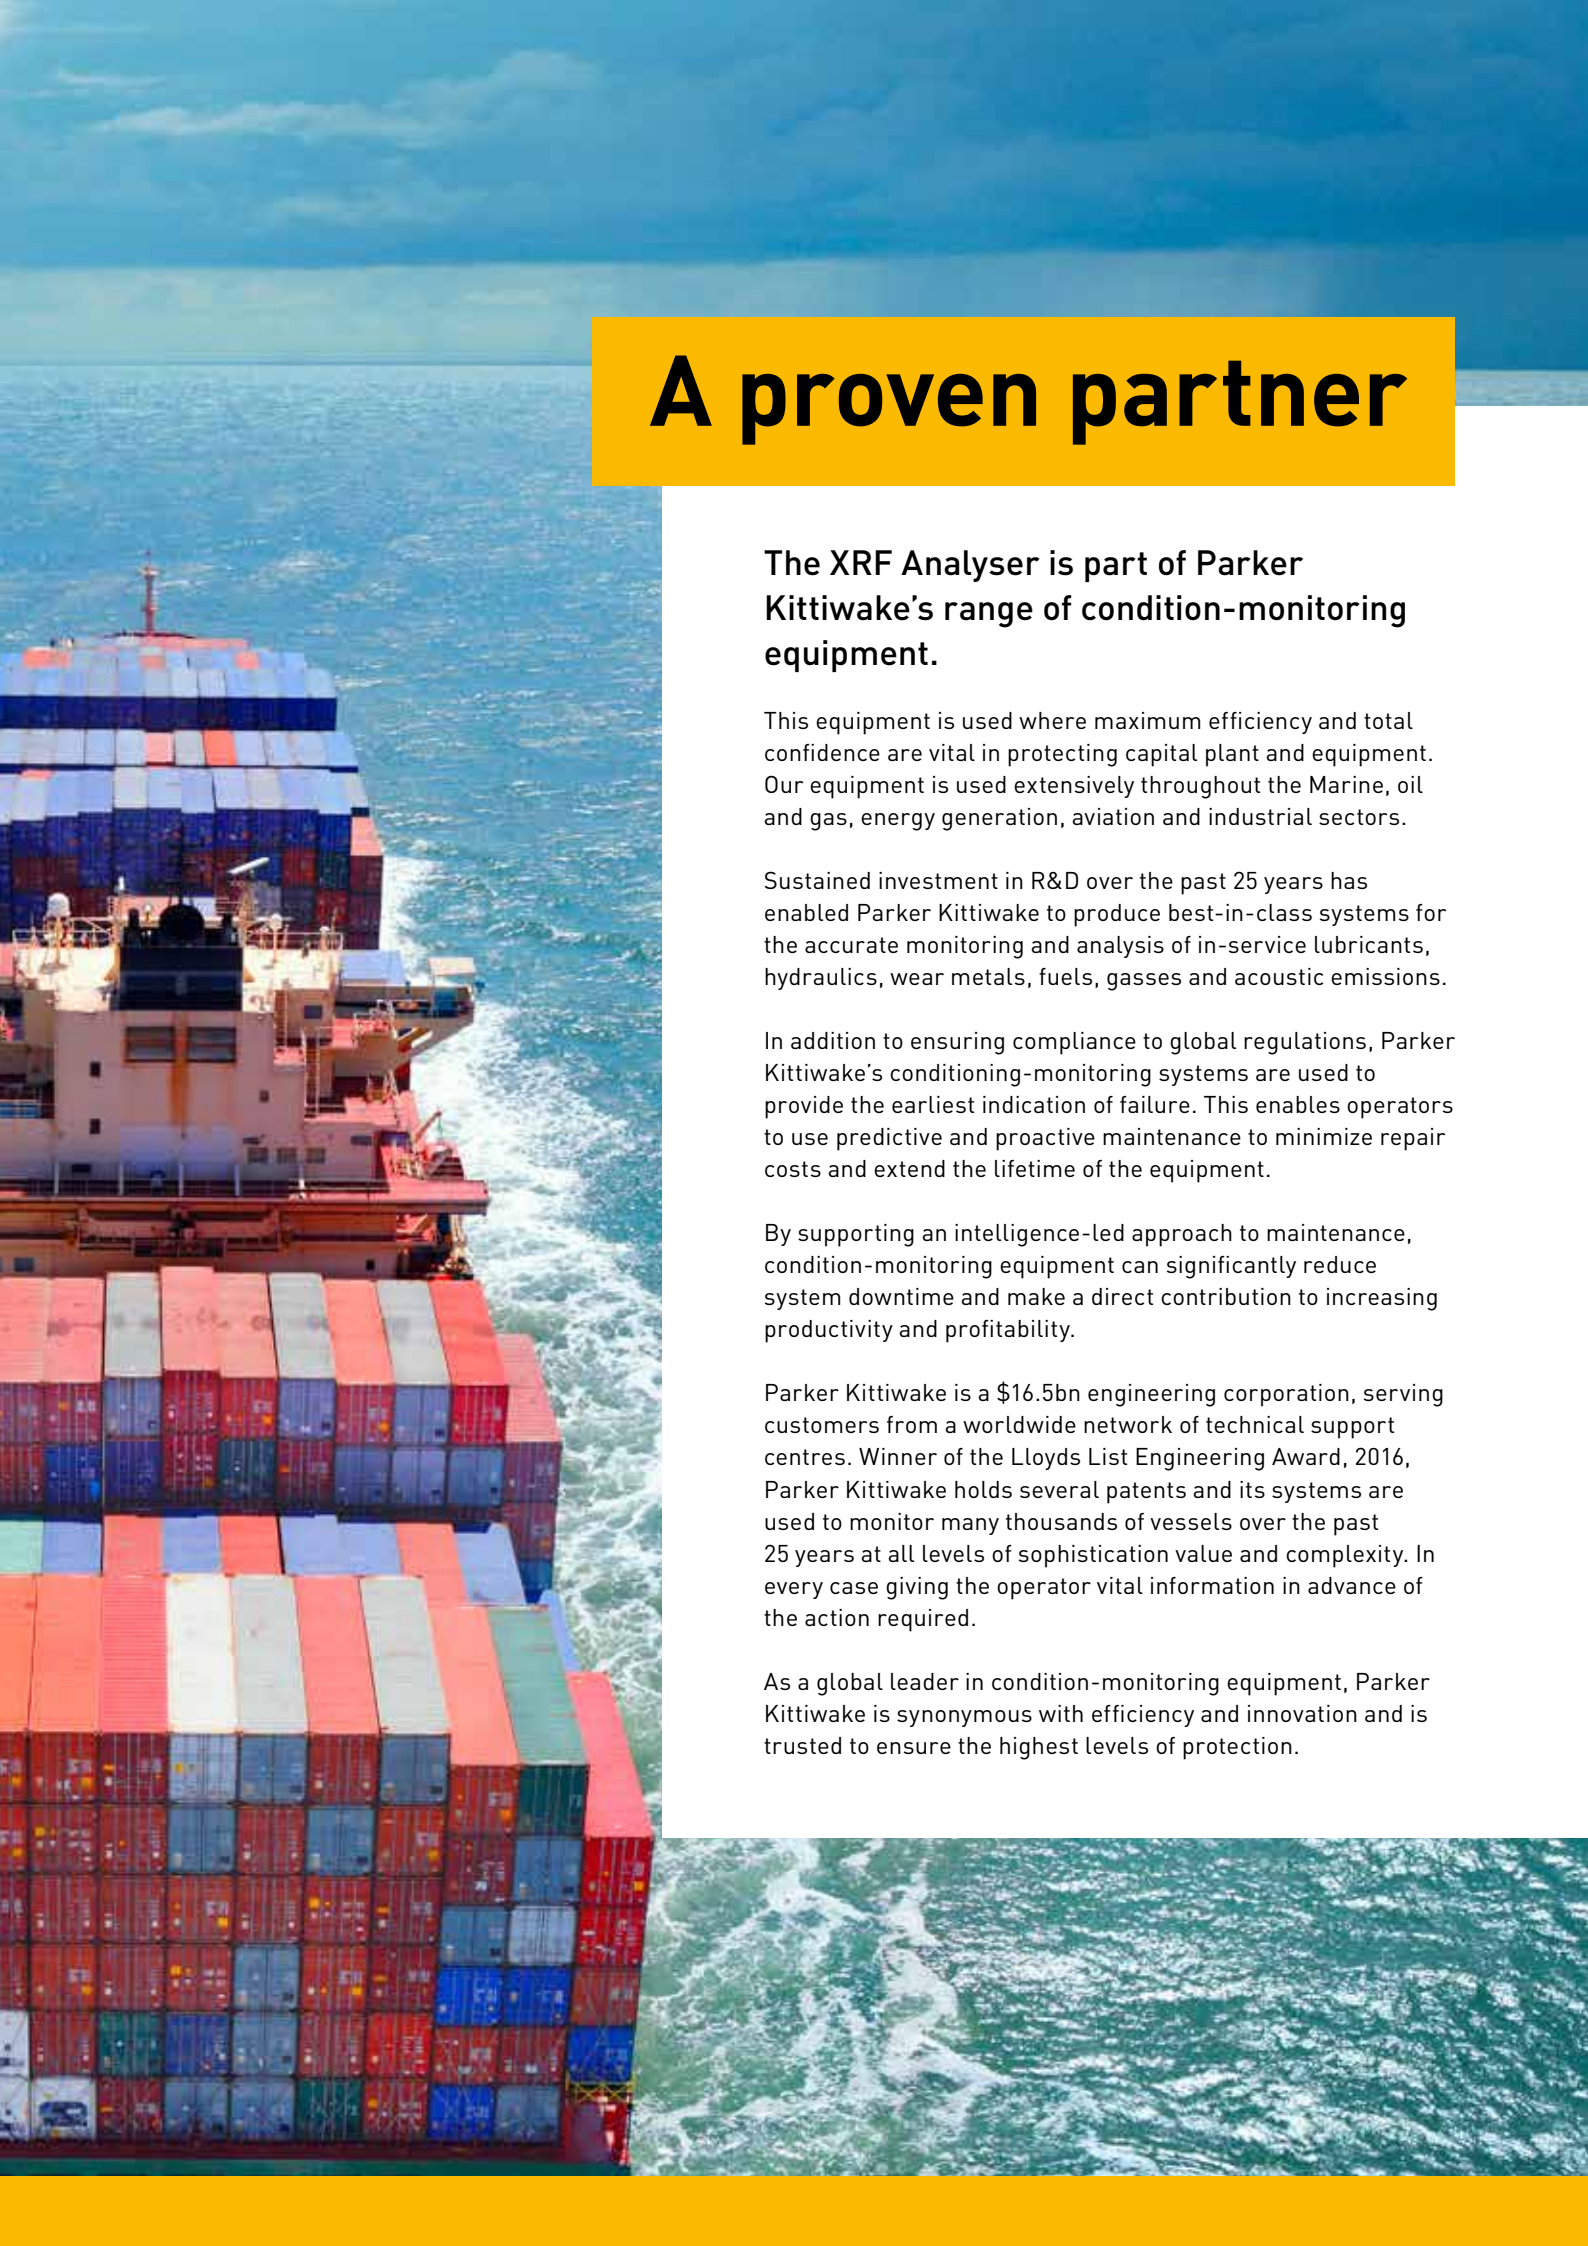

A large container ship is shown from an elevated perspective, sailing on a blue ocean under a clear sky. The ship's deck is densely packed with colorful shipping containers in shades of red, blue, and white. The ship's superstructure, including the bridge and various masts, is visible. The water shows a white wake behind the ship.

A proven partner

The XRF Analyser is part of Parker Kittiwake's range of condition-monitoring equipment.

This equipment is used where maximum efficiency and total confidence are vital in protecting capital plant and equipment. Our equipment is used extensively throughout the Marine, oil and gas, energy generation, aviation and industrial sectors.

Sustained investment in R&D over the past 25 years has enabled Parker Kittiwake to produce best-in-class systems for the accurate monitoring and analysis of in-service lubricants, hydraulics, wear metals, fuels, gasses and acoustic emissions.

In addition to ensuring compliance to global regulations, Parker Kittiwake's conditioning-monitoring systems are used to provide the earliest indication of failure. This enables operators to use predictive and proactive maintenance to minimize repair costs and extend the lifetime of the equipment.

By supporting an intelligence-led approach to maintenance, condition-monitoring equipment can significantly reduce system downtime and make a direct contribution to increasing productivity and profitability.

Parker Kittiwake is a \$16.5bn engineering corporation, serving customers from a worldwide network of technical support centres. Winner of the Lloyds List Engineering Award, 2016, Parker Kittiwake holds several patents and its systems are used to monitor many thousands of vessels over the past 25 years at all levels of sophistication value and complexity. In every case giving the operator vital information in advance of the action required.

As a global leader in condition-monitoring equipment, Parker Kittiwake is synonymous with efficiency and innovation and is trusted to ensure the highest levels of protection.

PARKER KITTIWAKE WORLDWIDE



© 2018 Parker Hannifin Corporation. All rights reserved.



FDKB722UK

Parker Kittiwake
3 - 6 Thorgate Road, Littlehampton,
West Sussex BN17 7LU
United Kingdom
Tel +44 (0)1903 731470
Fax +44 (0)1903 731480
kittiwakeinfo@parker.com
www.kittiwake.com

Marine Master Distributor:



SIMPLEX-TURBULO

tel: +44 1264 860186

email: spares@simplexturbulo.com

web: www.simplexturbulo.com

STC is a member of  **DIESEL AND MARINE GROUP**